
herzbach

34.153200.1.01

EPOCA WT-Einlochbatterie ohne Ablauf Chrom

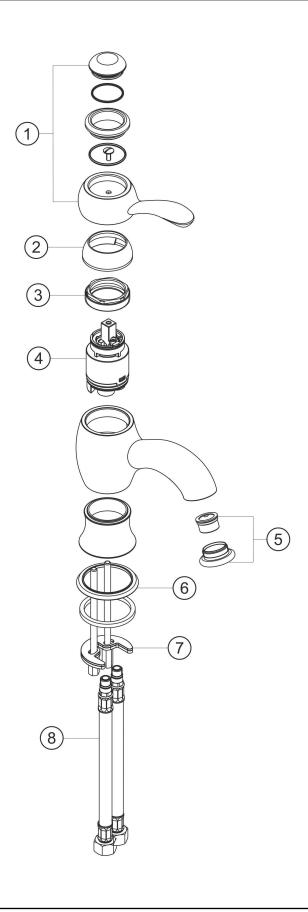





34.153200.1.01

EPOCA WT-Einlochbatterie ohne Ablauf Chrom



Ersatzteilliste

# Beschreibung	ArtNr.	PG
1 Griffhebel	80.425900.1.01	11
2 Glockenkappe	80.075200.1.01	3
3 Konterring für Kartusche	80.500000.1.09	2
4 Keramik-Kartusche	80.195300.1.09	7
5 Perlator M24x1	80.056300.1.01	6
6 Zierring	80.263000.1.01	6
7 Befestigung Satz	80.209100.1.09	3
8 Flexschlauch M10x1x350x3/8	80.037700.1.09	4